

Operator's manual

Vibrating plate

AP

2560e



Model	AP
Document	5100049441
Issue	03.2019
Version	02
Language	en

Copyright © 2019 Wacker Neuson Produktion GmbH & Co. KG

Printed in Germany

All rights are reserved, in particular the worldwide applicable copyright, right of duplication and right of distribution.

This document may only be used by the recipient for the intended purpose. The document may not be reproduced entirely or partially, or translated into any other language.

Reproduction or translation, even extracts thereof, only with written approval of Wacker Neuson Produktion GmbH & Co. KG.

Any breach of the statutory regulations, in particular the protection of copyright, will lead to civil and criminal prosecution.

Wacker Neuson Produktion GmbH & Co. KG is constantly working on the improvement of its products as part of the technical further development. Therefore, we reserve the right to make changes to the illustrations and descriptions in this documentation without incurring any obligation to make changes to machines already delivered.

Errors excepted.

The machine on the cover may have special equipment (options).



Manufacturer

Wacker Neuson Produktion GmbH & Co. KG

Wackerstraße 6

D-85084 Reichertshofen

www.wackerneuson.com

Tel.: +4984533403200

E-Mail: service-LE@wackerneuson.com

Original operator's manual

1 CALIFORNIA Proposition 65 Warning

**WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

**WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

**WARNING**

Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.

**WARNING**

Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER HANDLING.





1	CALIFORNIA Proposition 65 Warning	3
2	Preface	6
3	Introduction	7
3.1	Using the manual	7
3.2	Storage location of the manual	7
3.3	Accident prevention regulations	7
3.4	More information	7
3.5	Target group	7
3.6	Explanation of symbols	7
3.7	Wacker Neuson Contact partner	8
3.8	Disclaimer	8
3.9	Product identification of the machine	8
4	Safety	9
4.1	Policy	9
4.2	Proper use	9
4.3	Structural changes	9
4.4	Areas of responsibility of the operator	10
4.5	Operator responsibilities	10
4.6	Personnel qualification	10
4.7	Residual dangers	10
4.8	General safety instructions	10
4.9	Specific safety instructions – Vibratory plates	11
4.10	General safety instructions – Fuel, lubricants and coolants	12
4.11	Maintenance	12
4.12	General safety instructions - Rechargeable battery (accessories)	13
4.13	General safety instructions - Battery charger (accessories)	13
4.14	Personal Protective Equipment	14
4.15	Behavior in dangerous situations	15
5	Safety and information labels	16
6	Setup and function	17
6.1	Standard package	17
6.2	Application areas	17
6.3	Short description	17
7	Components and operator's controls	18
7.1	Components	18
7.2	Operator's controls	18
7.3	Components and operator's controls of the rechargeable battery (optional)	19
7.4	Components and operator's controls of the battery charger (optional)	19
8	Transport	20
8.1	Loading and transporting the machine	20
8.2	Packaging and transporting the rechargeable battery	21
8.3	Transporting the battery charger	21
9	Storage	21
9.1	Specific storage - Rechargeable battery	21
10	Operation and use	22
10.1	Before commissioning	22
10.2	Notes about operation	23
10.3	Commissioning	24
10.4	Operation	24
10.5	Decommissioning	25
10.6	After operation	25



11	Maintenance	27
11.1	Maintenance table	27
11.2	Maintenance work.....	27
12	Troubleshooting,	30
12.1	Fault table - rechargeable battery.....	30
12.2	Fault table.....	30
13	Disposal	32
13.1	Disposal of batteries	32
14	Disposal	33
14.1	Disposal of old electrical and electronic equipment.....	33
15	Accessories	34
16	Technical data	35
16.1	Noise and vibration information	35
16.2	Vibrating plate.....	36
16.3	Rechargeable battery	37
16.4	Battery charger	37
	EC Declaration of Conformity	39

2 Preface

This operator's manual contains important information and procedures for the safe, proper and economic operation of this Wacker Neuson machine. Carefully reading, understanding and observing is an aid to avoiding hazards, repair costs and downtime, and therefore to increasing the availability and service life of the machine.

This operator's manual is not a manual for extensive maintenance or repair work. Such work should be carried out by Wacker Neuson service or by technically trained personnel. The Wacker Neuson machine should be operated and maintained in accordance with this operator's manual. An improper operation or improper maintenance can pose dangers. Therefore, the operator's manual should be constantly available at the location of the machine.

Defective machine parts must be exchanged immediately!

If you have any questions concerning the operation or maintenance, a Wacker Neuson contact person is always available.

3 Introduction

3.1 Using the manual

This manual is to be considered part of the machine and should be carefully stored during the entire service life of the machine. This manual shall be transferred to subsequent owners or users of the machine.

3.2 Storage location of the manual

This manual is part of the machine and must be kept in the immediate vicinity of the machine and made accessible to staff at all times.

If this manual is lost, or if a second copy is required, there are two options to obtain a replacement:

- Download from the Internet: www.wackerneuson.com
- Contact your Wacker Neuson contact partner.

3.3 Accident prevention regulations

In addition to the notes and safety instructions in this manual, the local accident prevention regulations as well as the national health and safety regulations apply.

3.4 More information

This manual applies to various machine types from one product series. For this reason, some figures may vary slightly in appearance from the machine purchased. Depending on the model, there may be descriptions of components that are not included in the standard package.

The information contained in this manual is based on machines manufactured up to the time of printing. Wacker Neuson reserves the right to change this information.

The manufacturer shall immediately include any modifications or additions in this manual.

3.5 Target group

Individuals working with this machine must be regularly trained on the dangers of handling the machine.

This manual is intended for the following people:

Operating personnel:

These individuals have been trained on the machine and informed about the possible dangers in the event of improper conduct.

Technically trained personnel:

These people have professional training as well as additional knowledge and experience. They are able to assess the tasks assigned to them and recognize possible dangers.

3.6 Explanation of symbols

This manual contains specially emphasized safety instructions in the following categories: **DANGER**, **WARNING**, **CAUTION** and **NOTICE**.

Before performing any work on or with this machine, the notes and safety instructions must be read and understood. All notes and safety instructions in this manual must be passed on to the maintenance, repair, and transport personnel.



DANGER

This combination of symbol and signal word indicates a hazardous situation that will lead to death or serious injury if it is not avoided.



WARNING

This combination of symbol and signal word indicates a hazardous situation that can lead to death or serious injury if it is not avoided.



CAUTION

This combination of symbol and signal word indicates a hazardous situation that can lead to minor injury or damage to the machine if it is not avoided.

NOTICE

Supplementary information.

3.7 Wacker Neuson Contact partner

Depending on the country, the Wacker Neuson contact partner is a Wacker Neuson service department, a Wacker Neuson subsidiary, or a Wacker Neuson dealer.

On the Internet at www.wackerneuson.com.

3.8 Disclaimer

For the following violations, Wacker Neuson dismisses any liability for personal injury or material damage:

- Failure to follow this manual.
- Unintended use.
- Deployment of untrained personnel.
- Using non-approved spare parts and accessories.
- Improper handling.
- Structural modifications of any kind.
- Failure to observe the "General Terms and Conditions" (GT&Cs).

3.9 Product identification of the machine**Data of the type label**

The type label contains information that uniquely identifies this machine. This information is required for ordering spare parts and when inquiring about technical issues.

- Enter information about the machine in the following table:

Designation	Your information
Group and model	
Year of manufacture	
Machine number	
Version no.	
Item no.	

4 Safety

NOTICE

Read and comply with all notes and safety instructions in this manual. Failure to comply with these instructions can cause electric shock, fire and/or serious injuries as well as damage to the machine and/or damage to other objects. Keep safety instructions and notes for the future.

The notes and safety instructions in this chapter apply for all machine types described in this manual. The rechargeable battery is classified as a lithium ion battery according to international transport law. Lithium-ion batteries are a hazardous material and belong to hazardous material class 9 *Different hazardous substances and objects*.

The following information should help to comply with the obligations in this regard. In addition to the requirements named here, additional national regulations as well as exceptions due to the national transfer of multi-lateral agreements may also exist. These must also be observed:

The outline of the obligations under the hazardous material law in this manual does not release anyone from their own due diligence as well as the observance of regulations according to the original legal texts.

4.1 Policy

In keeping with the latest technological developments

The machine has been built in keeping with the latest technological developments and the recognized technical safety rules. Nevertheless, improper use can result in hazards to life and limb of the user, third parties or to damage to the machine and other material assets.

4.2 Proper use

The machine is intended for compacting soil:

- Compacting mixed and sandy soils.
- Asphalt compaction.
- Vibration of sett paving (paving stones).

The machine may only be combined and operated with permissible components.

The machine may only be operated with the rechargeable battery and accessories permitted by Wacker Neuson.

In particular, misuse is considered:

- Compaction of very cohesive soils.
- Compaction of frozen soils.
- Compaction of hard, non-compressible soils.
- Compaction of non-load-bearing soils.
- The connection of non-permissible components.
- Operating the machine outside of the power rating.
- Operation contrary to the notes and safety instructions fixed to the machine and included in the manual.

Use in accordance with the intended purpose also includes the observation of all safety instructions in this manual as well as complying with the prescribed care and maintenance instructions.

Any other use or use that exceeds this is considered as not being in accordance with the intended purpose. The manufacturer's liability and warranty are canceled for any damage resulting from improper use. The risk lies entirely with the operator.

4.3 Structural changes

Structural modifications may not be undertaken without the written permission of the manufacturer. Unapproved structural changes may result in risks to the operator and/or third parties as well as damage to the machine.

In the event of unapproved structural changes, the manufacturer's liability and warranty are also not applicable.

The following in particular are considered structural changes:

- Opening the machine and the permanent removal of components.
- Installing spare parts that do not originate from Wacker Neuson or are not comparable in the design system and quality of the original parts.
- Attaching accessories that do not originate from Wacker Neuson.

Spare parts or accessories that originate from Wacker Neuson can be safely mounted. They can be found on the Internet under www.wackerneuson.com.

4.4 Areas of responsibility of the operator

The operator is the individual who personally operates this machine for industrial or commercial purposes or who entrusts a third party with the use. The operator bears legal responsibility for his/her protection as well as that of third parties.

The user must make the operator's manual available to the operator and ensure that this has been read and understood.

All people whose working area includes the transport of the rechargeable battery are to be instructed in the requirements for transporting hazardous goods before commencing work.

4.5 Operator responsibilities

- Know and implement the applicable industrial safety regulations.
- Use a risk assessment to identify the dangers that result from the working conditions at the site of application.
- Create operating instructions for the operation of this machine.
- Periodically check whether the user instructions correspond to the current state of regulations.
- Clearly regulate and specify the responsibilities for installation, operation, troubleshooting, maintenance and cleaning.
- Regularly train employees and inform them about potential hazards.
- Periodically refresh the instruction.
- Keep records of the training received and provide them to the competent authorities upon request.
- Provide employees with the necessary equipment.

4.6 Personnel qualification

This machine may only be installed and operated by trained personnel.

The rechargeable battery may only be transported by specially trained or instructed personnel.

Faulty operation, misuse or operation by untrained personnel can endanger health of the operator or third parties and lead to damage to or total loss of the machine.

In addition, the operator should be:

- physically and mentally fit.
- not under the influence of drugs, alcohol or medication that can impair responsiveness.
- familiar with the safety instructions in this manual.
- familiar with the intended use of this machine.
- instructed in the independent operation of the machine.

4.7 Residual dangers

Residual dangers in particular are hazards when dealing with machines that, despite a safe design, cannot be eliminated.

These residual dangers are not obvious and may be the source of a possible injury or health hazard.

If unforeseeable residual dangers occur, the operation of the machine is to be stopped immediately and the competent supervisor is to be informed. This supervisor shall make the following decisions and initiate everything required to eliminate the occurring danger.

If necessary, the machine manufacturer is to be informed.

4.8 General safety instructions

The safety instructions in this chapter include the "General Safety Instructions", which should be reported in the manual in accordance with the applicable standards. There may be information that is not relevant to this machine.

4.8.1 Work area

- Keep the work area tidy. Cluttered or dark work areas can lead to accidents.

- Before beginning work, familiarize yourself with the working environment, e.g. the load-bearing capacity of the floor or obstacles in the vicinity.
- Make work area safe for the public transport sector.
- Necessary fuse protection of walls and ceilings, e.g. in trench applications.
- Using this machine in an explosive atmosphere is prohibited.
- When using this machine, children and unauthorized individuals must be kept away. Distraction can lead to loss of control of the machine.
- Always protect the machine against tilting, rolling, sliding, and crashing. Risk of injury!

4.8.2 Service

- The machine should only be maintained/repaired by technically trained personnel.
- Use only original spare parts and accessories. This preserves the operational safety of the machine.

Screw connections

All screw connections must meet the prescribed specifications and must be firmly screwed together. Observe the tightening torques!

The screws and nuts may not be damaged, bent or deformed.

Pay particular attention to:

- Captive nuts and micro-encapsulated screws may not be reused once loosened. The locking effect is lost.
- Screw connections with adhesive securing/liquid adhesives (e.g. Loctite) must be cleaned after loosening and must be provided with new adhesive.

NOTICE

Observe the instructions of the liquid adhesive manufacturer.

4.8.3 Personal safety

- Working under the influence of drugs, alcohol, or drugs can lead to serious injuries.
- Protective equipment should be worn for all work. Appropriate personal protective equipment considerably reduces the risk of injury.
- Remove any tools before the machine is put into operation. Tools that are located on a rotating machine part can be ejected and cause serious injury.
- Always ensure good footing.
- In the case of extensive work with this machine, long-term vibration-induced damage cannot be ruled out. For the vibration load of the machine, see chapter *Technical data*.
- Wear suitable clothing. Keep baggy or loose clothing, protective gloves, jewelry and long hair away from moving/rotating machine parts. Danger of being pulled!
- Ensure that no other individuals are in the danger area!

4.8.4 Handling and use

- Never operate machines whose switches are defective. Have defective switches exchanged immediately. Machines with defective switches have a high risk of injury.
- The operator's controls of the machine shall not be improperly locked, manipulated, or changed.
- Store unused machines out of the reach of children. The machine may only be operated by authorized personnel.
- Handle the machine with care. Have defective parts exchanged immediately before the machine is operated. Defective machines have a high risk of accidents.
- Use the machine, accessories, insertion tools, etc. according to these instructions.
- After operation, store the cooled-down machine in a locked, clean, frost-protected, and dry location that is inaccessible to children and other unauthorized individuals.

4.9 Specific safety instructions – Vibratory plates

4.9.1 External influences

In the case of the following external influences, the vibratory plate may not be operated:

- In an explosive vicinity. Explosion hazard!
- In the vicinity of a naked flame. Fire hazard!

4.9.2 Take work breaks regularly

When operating this machine for long periods of time, vibration-induced circulatory disorders may occur to your fingers, hands or wrists.

Symptoms:

- The aforementioned body parts falling asleep, tingling, pain, sharp pains and changes to skin color.

NOTICE

If these symptoms are determined, seek medical attention immediately.

- If you have a personal disposition to poor blood circulation, your working hours may be reduced despite wearing protective gloves and taking regular work breaks.

4.9.3 Operational safety

- When operating the machine, make sure that no gas, water, or electric lines are damaged.
- Pay maximum attention near drops or slopes. Risk of crashing!
- The operator must not leave the operator's position while it is in operation.
- In trench applications and pits, pay very close attention to the side walls to ensure they are stable and do not collapse from the vibration. Danger of collapse!
- Never leave the machine running unattended. Risk of injury!
- Delimit work area and restrict access to unauthorized individuals. Risk of injury!
- Machine operators must ensure that people in the work area keep a minimum distance of 2 meters from the running machine.
- When operating the machine on sloped surfaces, always approach slopes from below and always stay above the machine on a slope. The machine could slip or tip over.
- Only use Wacker Neuson rechargeable batteries. These are vibration-proof and therefore suitable for high vibration stresses.

4.9.4 Minimum safety distances

Compression work near buildings can cause damage to buildings. Therefore, all potential effects and vibrations on surrounding buildings must be checked in advance.

The relevant rules and regulations for measuring, evaluating and reducing vibration emissions - especially the DIN 4150-3 - must be considered.

Wacker Neuson assumes no liability for any damage to buildings.

4.10 General safety instructions – Fuel, lubricants and coolants

The following notes must be observed:

- Always wear safety glasses and protective gloves when handling fuel, lubricants, and coolants. Seek medical attention, for example if you get oil or grease in your eyes.
- Avoid direct skin contact with fuel, lubricants and coolants. Immediately rinse skin with soap and water.
- Do not eat or drink while working with fuel, lubricants and coolants.
- Contaminated oil from dirt or water can lead to premature wear or failure of the machine.
- Dispose of spilled fuel, lubricants and coolants according to the applicable regulations for environmental protection.

If fuel, lubricants and coolants escape from the machine, do not operate the machine any longer and have it repaired immediately by the Wacker Neuson contact partner.

4.11 Maintenance

The following notes must be observed:

- This machine may not be maintained, repaired, adjusted or cleaned while switched on. The rechargeable battery must be removed.
- Adhere to maintenance intervals.
- Observe the maintenance plan. Non-listed work must be taken over by the service department of the Wacker Neuson contact partner.
- Immediately replace worn or damaged machine parts. Only use spare parts from Wacker Neuson.
- Keep the machine clean.

- Missing, damaged, or illegible safety warning labels should be replaced immediately. Safety stickers contain important information for the protection of the operator.

Maintenance work must be performed in a clean and dry vicinity (e.g. workshop).

4.12 General safety instructions - Rechargeable battery (accessories)

The following notes must be observed:

- To charge the Wacker Neuson rechargeable batteries, only use the battery charger approved by Wacker Neuson.
- Wacker Neuson rechargeable batteries may only be used in the machine specified for this purpose by Wacker Neuson.
- Rechargeable batteries may not be dismantled, opened or deformed.
- The rechargeable batteries may not be exposed to heat or fire. Storage in direct sunlight is to be avoided.
- Rechargeable batteries may not be shorted out.
- Rechargeable batteries may not be stored in a box or draw as this can pose hazards where a mutual short-out can occur or a short-out can occur due to other conductive materials.
- Use the rechargeable battery for its intended purpose and protect it from damage.
- Rechargeable batteries may not be exposed to any mechanical impacts.
- If a rechargeable battery is leaking, the fluid must not come into contact with your skin or eyes. If contact has been made, wash the affected area with plenty of water and seek immediate medical attention.
- The polarity identification of plus and minus on the rechargeable battery and the machine must always be observed. Proper use must be ensured.
- Rechargeable batteries that are not intended for use together with the machine may not be used.
- Keep rechargeable batteries away from children.
- Seek immediate medical attention if rechargeable battery components are accidentally swallowed.
- Keep rechargeable batteries clean and dry. Do not allow them to come into contact with water.
- If the connections of rechargeable batteries become dirty, clean these with a dry and clean cloth.
- Rechargeable batteries must be charged before use. The proper charging process is to be applied in the process. See the chapter Charging and installing rechargeable batteries.
- Once the charge cycle is complete, the rechargeable battery is to be disconnected from the battery charger.
- When stored (>1 month), ensure that the charge capacity is between 30-50% if possible.
- Rechargeable batteries have their best power output if they are operated at normal room temperature (about 20°C).
- Rechargeable batteries may only be used in such applications that are intended for them.
- Keep paper clips, coins, keys, nails, screws and other small metal objects that could cause a bridging of the contacts away from rechargeable batteries. Danger of short circuit and fire!
- Rechargeable batteries are to be removed from the machine if possible if they are not being used.
- We recommend removing the rechargeable battery from the machine before transport.
- Remove the rechargeable battery from the machine when stored for a long time.
- Dispose of properly.

4.13 General safety instructions - Battery charger (accessories)

The following notes must be observed:

- Check the cable and plug before using the battery charger. A damaged battery charger, cable and plug increase the risk of an electric shock.
- Do not use the battery charger if damage has been found. Do not open the battery charger yourself, but rather only have it repaired by qualified technically trained personnel who are using original spare parts.
- Only use the battery charger indoors and keep away from rain and moisture. The penetration of water into the battery charger increases the risk of an electric shock.
- Only charge approved rechargeable batteries from Wacker Neuson.
- The battery charger may not be exposed to heat or fire. Storage in direct sunlight is to be avoided.
- The battery charger may not be exposed to any mechanical impacts.
- Rechargeable batteries that are not intended for use together with the machine may not be used.
- If the connections are dirty, clean these with a dry and clean cloth.

- Once the charge cycle is complete, the rechargeable battery is to be disconnected from the battery charger.
- Do not operate the battery charger on easily flammable surfaces (e.g. paper, textiles) or in flammable environments. Fire hazard!
- Do not operate the battery charger in freezing temperatures and do not place it in direct sunlight.
- The connector plug of the battery charger must fit in the outlet. The plug may not be changed in any way. Do not use any adapters, since these are usually designed without a grounded conductor terminal. In this case, there is an increased risk of electric shock.
- Avoid physical contact with grounded surfaces (tubes, heaters). If the body is grounded, there is an increased risk of electric shock.
- Keep battery charger away from children.
- Always keep the battery charger clean and dry. Dirt accumulation results in the danger of an electric shock.
- Keep the power cable clean and avoid the effects of heat, oil, sharp edges or moving machine parts on the cable. The power cable may not be used for carrying or suspending the machine. Do not pull the cable to pull the plug out of the outlet.
- Dispose of properly.

4.13.1 Electrical safety

- The connector plug of the battery charger must fit in the outlet. The connector plug may not be modified in any way. Do not use the adapter plug together with grounded machines. Unmodified plugs and outlets reduce the risk of an electric shock.
- Avoid physical contact with grounded surfaces. There is a higher risk of electric shock if your body is grounded.
- Keep battery charger away from moisture. Penetrating moisture increases the danger of an electric shock.
- Do not divert the cable from its intended use. Protect cable from heat, oil and sharp objects. Damaged or entangled cables increase the risk of an electric shock.
- If work in a moist environment cannot be avoided, a fault current protective switch must be used. Fault current protective switches reduce the risk of an electric shock.

4.13.2 Extension cable and cable drum

The following points must be observed in order to minimize the danger of injuries, fire, electric shock and material damage:

- The extension cable and cable drum must be inspected and undamaged.
- Only use extension cables with grounded conductors and a grounded conductor terminal to the plug and coupling.
- Only use inspected extension cables and cable drums that are suitable for construction site use.
- Damaged extension cables and cable drums may not be used and must be replaced immediately.
- Cable drums and multi-pole outlets must have the same requirements as extension cables.
- Protect extension cables, cable drums, multi-pole outlets and connection couplings from moisture.
- The extension cables and cable drums must be completely unrolled before operation.

4.14 Personal Protective Equipment

NOTICE

To prevent personal injury when handling this machine, personal protective equipment must be worn when working on or around this machine.

Pictogram	Significance	Description
	Wear safety shoes!	Safety shoes provide protection from bruises, falling objects, and slipping.
	Wear protective gloves!	Protective gloves provide protection from abrasion, cuts, punctures, and hot surfaces.
	Wear ear protection!	Ear protection provides protection from permanent hearing impairment.
	Wear a protective helmet!	A protective helmet protects against injuries from falling objects.

NOTICE

With this machine, the permissible, country-specific noise limit (personal rating level) may be exceeded.

Therefore, ear protection must be worn. For exact values for noise measurement, see chapter *Technical data*.

Work particularly cautiously and pay attention when wearing ear protection, as your ability to hear noises, such as screams or signal tones, is restricted.

Wacker Neuson recommends always wearing ear protection.

4.15 Behavior in dangerous situations

Preventive measures:

- Always be prepared for accidents.
- Keep first aid equipment on hand.
- Make sure that all employees are familiar with accident reporting, first aid, and rescue facilities.
- Keep access routes clear for emergency vehicles.
- Make sure that employees receive first aid training.

Measures in the case of an emergency:

- Immediately take the machine out of operation.
- Remove injured and other people from the danger area.
- Initiate first aid measures.
- Alert rescuers.
- Keep access routes clear for emergency vehicles.
- Inform the person responsible at the site of application.

Measures in the case of a fire:

- Remain clear of resulting vapors and gases. Note the wind direction!
- Only extinguish fire with a fire extinguisher of fire classification ABC (powder extinguisher).

5 Safety and information labels




WARNING


Illegible symbols

Over time, labels and signs on the machines can become dirty or otherwise unrecognizable.

- Keep all safety, warning, and operating instructions on the machine in a legible condition.
- Replace damaged labels and signs immediately.

The following labels are located on the machine:

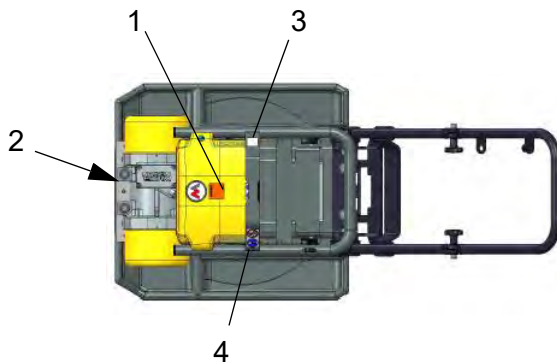

Item	Label	Description
1		Use personal protection equipment in order to prevent injuries and health hazards. ■ Ear protection. ■ Read operator's manual.
2		Warning against hot surface. Read the operator's manual before commissioning.
3		Guaranteed sound power level.
4		Falling machines can cause serious injury. ■ Only lift machine at the central lifting point with certified lifting gear and sling (safety load hook). ■ Do not lift the machine on the central lifting point with an excavator bucket.

6 Setup and function

6.1 Standard package

The standard package includes:

- Vibrating plate.
- Operator's manual.

Other components:

- Rechargeable battery.
- Battery charger.

NOTICE

The rechargeable battery is delivered separately for technical safety reasons.

6.2 Application areas

The vibrating plate is used for compacting soil and is used in gardening and landscaping, civil engineering and road and highway construction.

6.3 Short description

In this machine is a vibrating plate that is operated with a Wacker Neuson rechargeable battery.

The vibrating plate by Wacker Neuson consists fundamentally of a rechargeable battery, converter, exciter, base plate and guide bracket.

The rechargeable battery carrier and baseplate are connected to each other through vibration-absorbing rubber metal buffers.

The rechargeable battery with its converter transfers the power via the exciter to the baseplate. This generates a centrifugal force to compact the soil.

Rechargeable battery

This component is a lithium-ion rechargeable battery. The rechargeable battery has a display with six LEDs, which indicate the charge situation of rechargeable battery as well as service information.


Battery charger

This component is a battery charger for the efficient charging of rechargeable batteries.

The charging process is automatically adjusted to the current charge situation of the rechargeable battery. If the rechargeable battery is fully charged, the battery charger switches to the preservation mode.


7 Components and operator's controls

7.1 Components

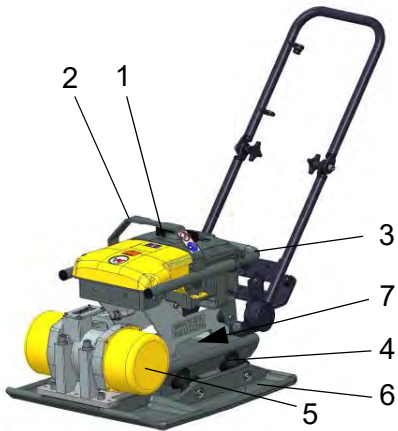


Item	Designation	Item	Designation
1	Rechargeable battery (optional)	5	Exciter
2	Central lifting point	6	Base plate
3	Protective cage	7	Nameplate
4	Rubber-metal buffer		

7.2 Operator's controls

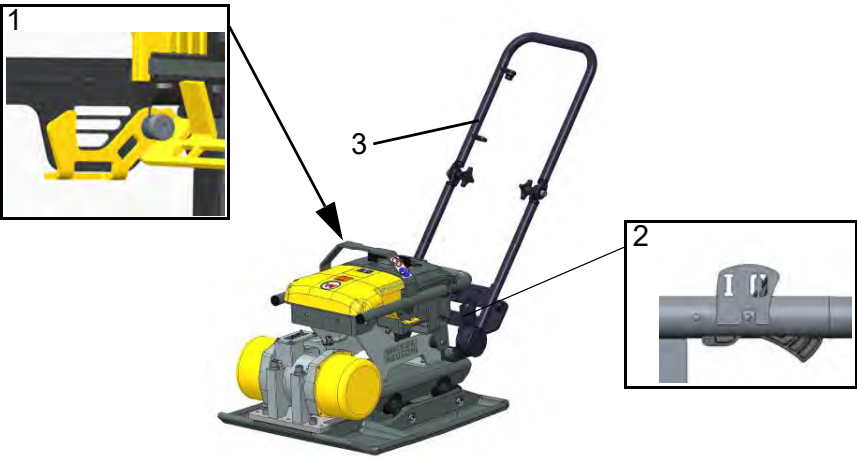

Item	Designation	Item	Designation
1	Lock	3	Control handle
2	Switching and safety lever		

7.3 Components and operator's controls of the rechargeable battery (optional)

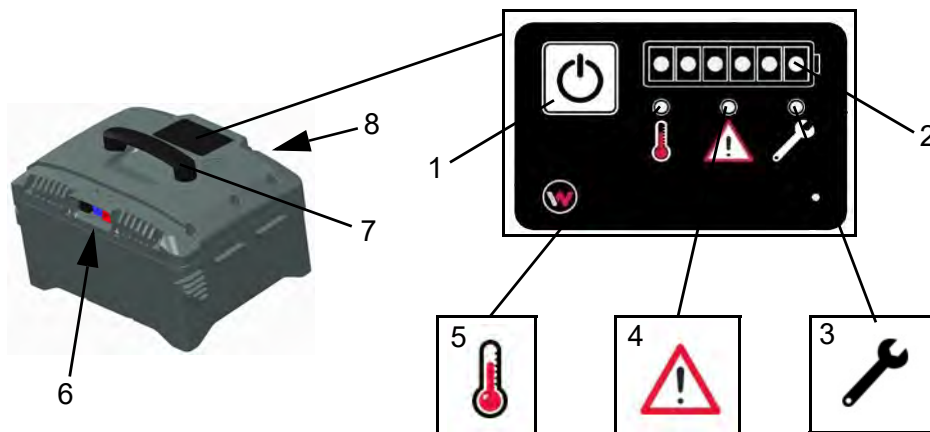

Item	Designation	Item	Designation
1	Start button on/off	5	Temperature display
2	Display – battery charge state	6	Connection
3	Service indicator	7	Handle
4	Fault indication	8	Nameplate

Display - battery charge state

The display uses six LEDs to indicate the charge situation of rechargeable battery.

Service indicator

If the LED illuminates, contact the service department of the Wacker Neuson contact partner.

Temperature display

The LED illuminates if the rechargeable battery has reached a temperature that is too high or too low.

Fault indication

The LED illuminates if there is a fault.

7.4 Components and operator's controls of the battery charger (optional)



Item	Designation	Item	Designation
1	LED charge indicator	4	Power cable of the rechargeable battery
2	LED operating indicator	5	Power cable
3	LED fault indicator	6	Nameplate

8 Transport



WARNING

Improper handling may result in injury or serious material damage.

- Please read and follow all safety instructions in this operator's manual.



WARNING


Danger from falling.

Falling machines can cause serious injuries from crushing.

- Only use suitable and tested lifting gear and slings with sufficient lifting capacity.
- Reliably secure the machine to the lifting gear.
- Do not lift the machine with an excavator bucket or forklift.
- Do not lift the machine at the control handle.
- Evacuate danger area while lifting, do not stop under suspended loads.


8.1 Loading and transporting the machine

Carry out preparations

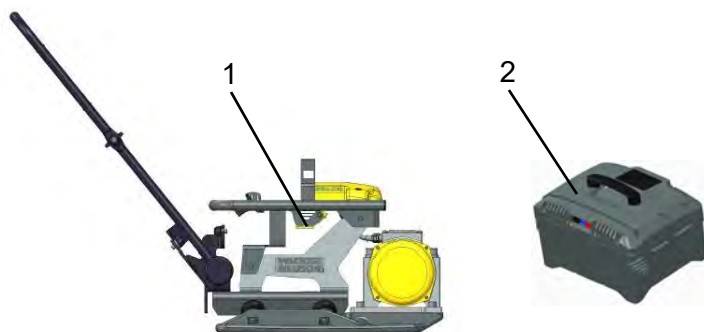

Item	Designation	Item	Designation
1	Lock	2	Rechargeable battery

1. The rechargeable battery must be removed before loading and transport.

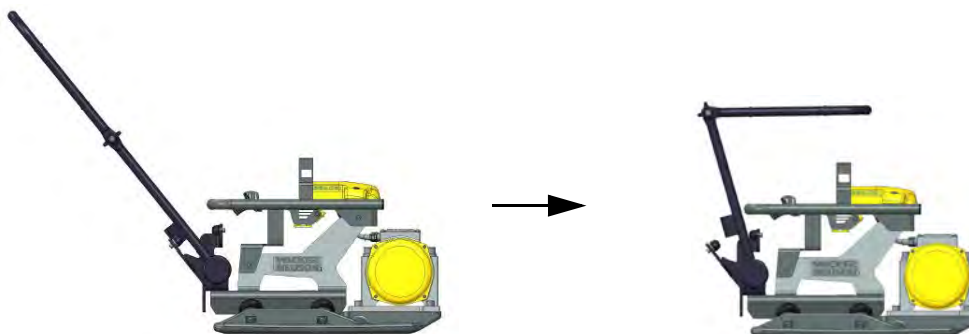

2. The guide bracket can be folded for transport.

Lifting and lashing down the machine

NOTICE

Appoint a specialist flagman for a safe lifting operation.



Item	Designation	Item	Designation
1	Central lifting point	2	Lashing

1. To lift the motor, hang suitable tackle at the central lifting point.
2. Carefully load machine into or onto a stable means of transport.
3. After loading the machine, lash down the machine to prevent it from rolling off, slipping, or tipping over.

8.2 Packaging and transporting the rechargeable battery

NOTICE

Always read and comply with the transport regulation accompanying the rechargeable battery and the safety instructions in this manual!
The current transport regulations version must be observed, regardless of the transport medium and route.

- The rechargeable battery must be switched off during packaging and transport.

8.3 Transporting the battery charger

Wind up the battery charger cable. Do not bend the cable.

9 Storage

In order to avoid possible damage, the following points must be observed:

- Always store the machine, rechargeable battery and battery charger separately.
- Do not store outdoors.
- Store dry and free of dust.
- Protect from direct sunlight.

9.1 Specific storage - Rechargeable battery

In order to avoid possible damage, the following points must be observed:

- If possible, store at an air humidity of < 80%. Risk of corrosion!
- Store as cool as possible (< 25°C).
- If possible, store at 30-50% charge situation of battery.
- Store separately from other hazardous substances (minimum distance of 2.5 meters).
- Do not store with metallic objects. Risk of short circuit!
- No fire and open light in the storage area.
- For permitted storage temperatures, see chapter *Technical Data*.

10 Operation and use



WARNING

Improper handling may result in injury or serious material damage.

- Please read and follow all safety instructions in this operator's manual.

10.1 Before commissioning

10.1.1 Inspection before commissioning

- Check the machine and components for damage. In the event of visible damage, do not operate the machine and immediately contact a Wacker Neuson dealer.
- Check the switching and safety lever for smooth and effortless movement.
- Ensure that loose packaging material has been removed from the machine.
- Current regulations of the local authorities for noise emissions.
- Charge situation of rechargeable battery.
- Check the screwed connections for a secure seat.

NOTICE

Perform control procedures according to the *Maintenance* chapter. If necessary, top off missing fuel, lubricants and coolants, see chapter *Technical Data*.

10.1.2 Charge and deploy rechargeable battery

NOTICE

Only use battery chargers and rechargeable batteries from Wacker Neuson.

Charge the rechargeable battery

1. Place the battery charger and rechargeable battery on a dry and clean working area.
2. Connect the battery charger to the power source.
3. Then connect the rechargeable battery to the battery charger.
4. Check the charge situation of battery regularly.
5. If the rechargeable battery is completely charged, unplug the rechargeable battery from the battery charger and de-energize the battery charger.

Deploy the rechargeable battery

NOTICE

The electrical contacts and contact surface of the rechargeable battery must be clean and dry.




Item	Designation	Item	Designation
1	Starter lever	2	Rechargeable battery

1. Position the starter lever in the OFF position.

NOTICE

Note the direction of installation when installing the rechargeable battery. The connections must point in the direction of the protective cover.

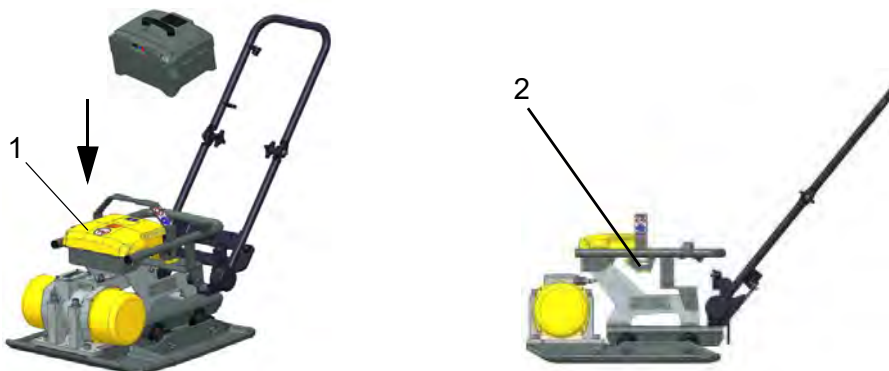

Item	Designation	Item	Designation
1	Protective cover	2	Lock

2. Lift the rechargeable battery by the handle and carefully insert it into the guide rail provided for this purpose.
3. Insert the rechargeable battery by the handle until you hear a clearly audible snapping into place sound of the lock. Make sure the rechargeable battery is firmly seated.

10.2 Notes about operation



CAUTION

Beware of physical impairments caused by vibration.

- Take breaks periodically.
-

- In accordance with the intended purpose, the operator should stand behind the machine.
- Guide and steer the machine using the control handle.

Operation on sloped surfaces

- Always stand above the machine within the area of a slope.
- Only approach gradients from below (a gradient that can be easily driven up can also be driven down without any risk).
- Do not stand in the direction of descent of the machine.

Operation in channels

- On pit, cavity, dump and embankment edges, on trench edges and terraces, operate the machine so that there is no danger of tipping or falling over.
- Pay attention to the sidewalls and their stability. Danger of collapse and burying!

Soil properties

- The maximum dumping height depends on several factors of the soil properties, such as moisture, particle-size, etc.


It is therefore not possible to provide an exact specification for this value.

Recommendation: In each case, determine the maximum dumping height through compaction tests and soil samples.

Vibrating sett paving (paving stones)

When compacting interlocking paving stones, Wacker Neuson recommends using of the sliding device in order to avoid damage to the machine and compaction material. See chapter *Accessories*.

10.3 Commissioning

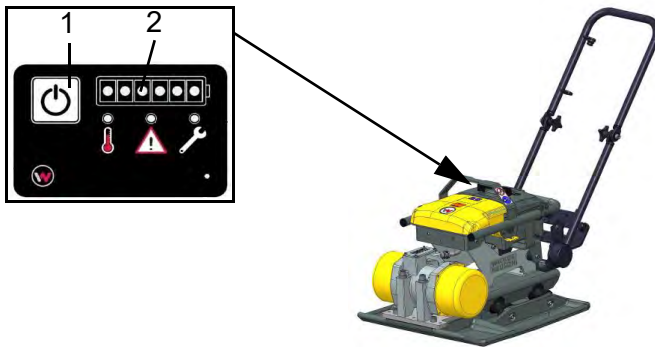


Item	Designation	Item	Designation
1	Start button on/off	2	LED light progress bar

1. Firmly hold the machine by the control handle.
2. Check that the starter lever is in the OFF position.
3. Press the starter button on the rechargeable battery.
4. Pay attention to the light progress bar. The LEDs illuminate alternating and then show the current charge situation of rechargeable battery.

NOTICE

If not started, the rechargeable battery automatically switches off after 30 seconds.

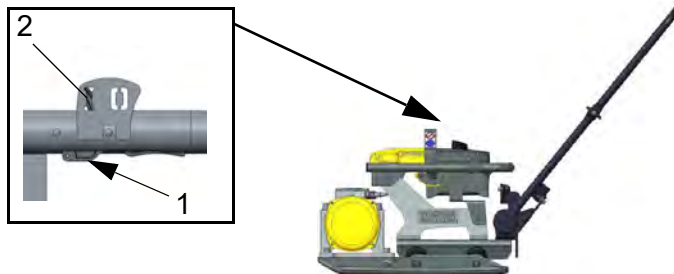

Item	Designation	Item	Designation
1	Safety lever	2	Starter lever

5. With one hand, pull the safety lever and slowly push the starter lever forward.
6. The machine will start and the vibration starts in the forward direction.

10.4 Operation


Only guide and steer the machine using the control handle.

10.4.1 Display – battery charge state

Regularly check the charge situation of rechargeable battery during operation.

Number of illuminating LEDs of the rechargeable battery	Significance
1 LED illuminates	Charge situation of battery 0 - 20% - Charge the rechargeable battery.
2 LEDs are illuminated	Charge situation of battery > 20%
3 LEDs are illuminated	Charge situation of battery > 40%
4 LEDs are illuminated	Charge situation of battery > 60%
5 LEDs are illuminated	Charge situation of battery > 80%
6 LEDs are illuminated	Charge situation of battery 100% - Rechargeable battery is completely charged.
all LEDs off	Automatic shutdown after about 30 seconds

10.5 Decommissioning

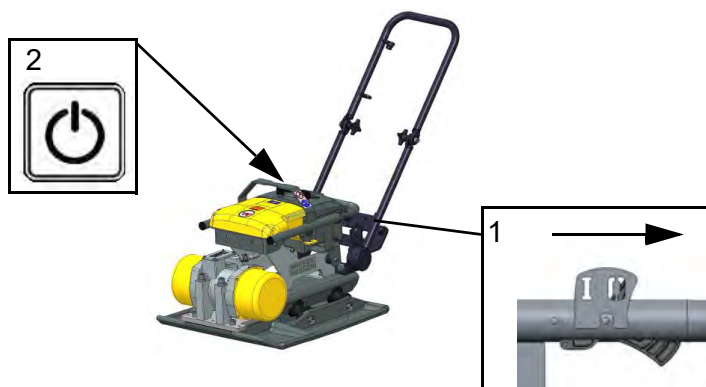

Item	Designation	Item	Designation
1	Starter lever	2	Start button on/off

1. Slowly pull the starter lever backward until the detent.
2. The safety lever will lock into place with the starter lever and hold this in the OFF position.
3. Wait until the machine has come to a complete standstill.

NOTICE

Park the machine so that it cannot tip over, fall or slip away.

10.6 After operation




CAUTION

Hot surfaces

- Wear protective gloves.

10.6.1 Remove the rechargeable battery

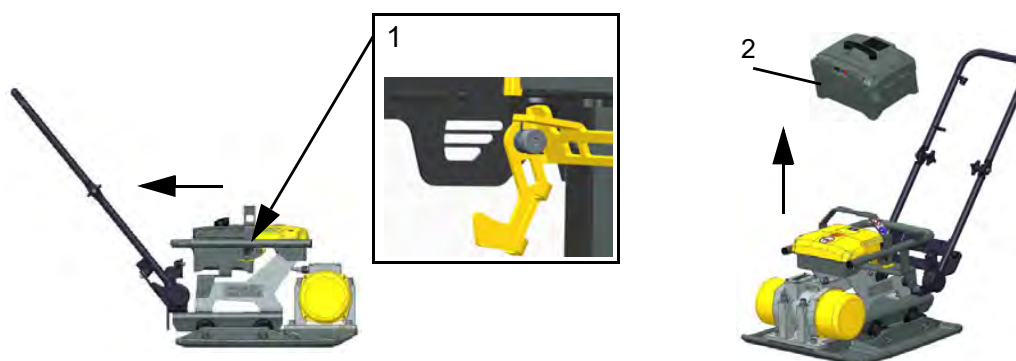

Item	Designation	Item	Designation
1	Lock	2	Rechargeable battery

1. Wait until the machine has come to a complete standstill.
2. Check that the starter lever is in the OFF position.
3. Push the lock down.
4. Carefully pull the rechargeable battery by the handle to the rear until the detent.
5. Pull out the rechargeable battery by the handle and put down safely.

11 Maintenance



WARNING

Improper handling may result in injury or serious material damage.

- Please read and follow all safety instructions in this operator's manual.



WARNING

Risk of injury from uncontrolled starting of the machine and moving parts.

- Only perform maintenance work with the machine switched off and battery dismantled.



WARNING

Warning of hot surfaces

The exciter can become extremely hot even after a short time, which can lead to severe skin burns.

- Always allow the engine to cool down completely after use.

11.1 Maintenance table

Maintenance work	daily	150 h
Clean the machine Visual check for completeness. Visual check for damage.	■	
Check the switching and safety lever for smooth and effortless movement and function.	■	
Check to ensure the screwed connections are firmly seated.	■	
Clean the rechargeable battery Visual check for damage.	■	
Clean the battery charger Visual check for damage.	■	
Grease the exciter (cylindrical roller bearings).		■

11.2 Maintenance work

Carry out preparation work:

1. Place the machine on a level surface.
2. Decommissioning the machine.
3. Remove the rechargeable battery.
4. Let the machine cool.

11.2.1 Machine maintenance jobs

Clean the machine

NOTICE

Do not use high-pressure washers!
Penetrating water can damage electrical operator's controls or components of the machine.

1. After cleaning, check the cable, utility lines and hardware for loose connections, chafe marks and other damage.
2. Immediately eliminate detected deficiencies.


11.2.2 Grease the exciter (cylindrical roller bearings)



WARNING

Excessive grease can conduct electricity
Injury from electric shock.

- Wipe off any excess grease.
-

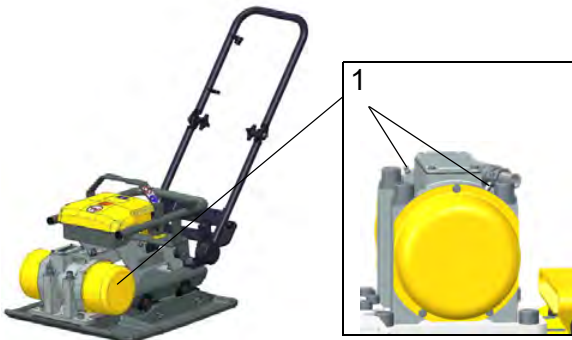

Item	Designation
1	Screw plug for filler boring

NOTICE

Overgreasing changes the machine's behavior until it fails.

The following points must be observed and maintained:

1. Remove contaminants in the area of the screw plug.
2. Unscrew the screw plug from the filler boring.
3. Place a filled manual grease gun (DIN 1283) on the lubrication point and press once or twice (1.0 - 2.0 cm³) per lubrication point.
4. Wipe the filler boring area with a clean cloth.
5. Screw the screw plug with seal ring into the filler boring. The tightening torque setting is 3.5 Nm.

11.2.3 Maintenance jobs for the rechargeable battery

Clean the rechargeable battery



WARNING

Risk of fire and explosion when using flammable cleaning agents.

- Do not clean the machine and elements with gasoline or other solvents.
-

NOTICE

Only use dry and clean cloths!

Penetrating moisture can lead to a total failure.

- Check for damage after cleaning.

NOTICE

If the rechargeable battery is damaged, contact the service department of the Wacker Neuson contact partner.

11.2.4 Maintenance jobs of the battery charger

Clean the battery charger



WARNING

Risk of fire and explosion when using flammable cleaning agents.

- Do not clean machine, components, or operator's controls with gasoline or other solvents.
-

NOTICE

Only use dry and clean cloths!

Penetrating moisture can lead to a total failure.

1. Check for damage after cleaning.
2. Check the cable and plug to ensure they are in a flawless condition.

NOTICE

If the battery charger is damaged, contact the service department of the Wacker Neuson contact partner.

12 Troubleshooting,



DANGER

Danger to life from unauthorized troubleshooting.

- If faults occur with this machine that are not described in this manual, contact the manufacturer. Do not eliminate the faults independently.

12.1 Fault table - rechargeable battery

Pictogram	LED over Pictogram	Possible cause	Remedial measure
	■ Fault LED comes on. ■ Fault LED stays on.	■ Voltage too high. ■ Contacting error. ■ Hardware error.	■ Isolate the rechargeable battery from the machine or the charging unit. ■ Clean and if necessary dry the contacts. ■ Resume operations with the machine and clear the fault with the button. ■ *
	Temperature LED comes on.	Temperature error (over/under temperature).	■ Operate the machine only in the permitted temperature range. ■ Allow the equipment to cool down if necessary. ■ Resume operations with the machine and clear the fault with the button.
	Maintenance LED comes on.	The rechargeable battery was disabled due to a fault.	*
* Contact your Wacker Neuson contact partner.			

12.2 Fault table

Fault	Possible cause	Remedial measure
The machine will not operate.	The charge state of the rechargeable battery is too low.	Charge the rechargeable battery.
	The rechargeable battery is not properly installed in the machine.	Install the rechargeable battery properly in the machine.
	The rechargeable battery is defective.	*
	The starter lever is in the forward position when ON switch on the rechargeable battery was actuated.	Put the starter lever in the OFF position.
The machine is displaying unexpected faults during commissioning or operation.	Refer to the rechargeable battery faults table.	Press the ON/OFF start button and remove the rechargeable battery if the fault persists *



Fault	Possible cause	Remedial measure
The machine switches itself off.	The charge state of the rechargeable battery is too low.	Charge the rechargeable battery.
	The machine was overloaded.	Switch the machine on again.
	Excess temperature of the converter.	Let the machine cool.
	Machine under temperature.	Operate the machine only in the permitted temperature range, see Chapter <i>Technical data</i> .
* Contact your Wacker Neuson contact partner.		

13 Disposal

13.1 Disposal of batteries

The machine contains one or more batteries or rechargeable batteries (hereinafter referred to as "the battery"). Professional disposal of the battery prevents negative effects on individuals and the environment, follows the specific treatment of pollutants, and ensures the recycling of useful raw materials.

For customers in EU countries

This battery is subject to the European Directive on (old) batteries and (old) rechargeable batteries, and the respective national laws. The battery directive outlines the framework for an EU-wide treatment of batteries.



The battery is marked with the following symbol of a crossed-out garbage bin. Below this symbol, there is also the designation of the pollutants contained therein, i.e. "Pb" for lead, "Cd" for cadmium, and "Hg" for mercury.

Batteries may not be disposed of with normal household waste! End-users may only dispose of used batteries via the manufacturer and the dealer or specially equipped collection facilities (statutory obligation to return); the delivery is free. Retailers and manufacturers are obliged to take back these batteries and properly recycle them or dispose of them as hazardous waste (legal obligation).

Batteries obtained through Wacker Neuson can be returned to Wacker Neuson free of charge after use. If the batteries cannot be personally returned to a Wacker Neuson branch, there are instructions in the sales contract or in the Terms and Conditions of the location where they were purchased.

For customers in other countries

Wacker Neuson recommends that you do not dispose of the battery in normal household waste but rather in a separate, environmentally friendly collection facility. National laws may also have regulations for the separate disposal of batteries. Disposal of the battery in accordance with current national guidelines must be assured.

14 Disposal

14.1 Disposal of old electrical and electronic equipment

Professional disposal of this machine avoids negative effects on human health and the environment, helps with the targeted treatment of pollutants and makes it possible to recycle valuable raw materials.

For customers in EU countries

This machine is subject to the European directive for old electrical and electronic equipment (Waste Electrical and Electronic Equipment (WEEE)), as well as the corresponding national laws. The WEEE directive provides the framework for an EU-wide treatment of old electrical equipment.



The machine is marked with the following symbol of a crossed-out garbage bin. This means that you do not dispose of the battery in normal household waste but that it must be disposed of in a separate, environmentally friendly collection facility.

This unit is provided as a professional electrical tool exclusively for commercial use (a so-called B2B device according to the WEEE directive). Unlike equipment mostly used in private households (so-called B2C devices), this machine may therefore not be disposed of in some EU countries, such as in Germany, at the collection points of public waste management organizations (e.g. municipal collection stations). If there are any doubts, information regarding the different methods of disposal for B2B electronic devices for each country can be obtained from the sales location, so that the disposal takes place in accordance with the valid statutory provisions. There are also some notes to follow in the sales contract or in the general Terms and Conditions of the sales location.

For customers in other countries

It is recommended that you do not dispose of the machine in normal household waste but rather in a separate, environmentally friendly collection facility. National laws also may, under certain circumstances, prescribe the separate disposal of electrical and electronic products. Correct disposal of this machine in accordance with current national guidelines must be assured.

15 Accessories



CAUTION

Accessories and spare parts that do not originate from Wacker Neuson can increase the risk of injury and possible damage to the machine.

- The use of other accessories and spare parts that do not originate from Wacker Neuson shall cancel any liability.
-

A wide range of accessories is offered for the machine.

More information about the individual accessories can be found online at www.wackerneuson.com.

Sliding mechanism

Sliding mechanisms offer optimal protection against damage to the sett paving (paving stone) surface, which is especially required for surface-coated types of paving.

Transport device

A transport device is offered for easier transport on the job site.

16 Technical data

NOTICE

The given total vibration value and the given noise emission value can also be used for an interim estimate of the loading. The result of this is to determine further safety measures to protect the operator during the actual conditions of use.

16.1 Noise and vibration information

The noise and vibration information listed was determined according to the following guidelines with the machine-typical operating states / specific test conditions while applying harmonized standards:

- Machines directive 2006/42/EC
- Noise emissions directive 2000/14/EC

In operational application, deviating values may result depending on the prevailing operating conditions.

16.1.1 Noise information

Sound pressure level at the operator's position

- The LWA was determined pursuant to EN ISO 11201 and EN 500-4.

Guaranteed sound power level

- The LWA was determined pursuant to EN ISO 3744 and EN 500-4.

16.1.2 Hand-arm vibration (HAV) information

Weighted total vibration value

- The HAV was determined pursuant to EN ISO 20643 and EN 500-4.

16.2 Vibrating plate

Designation	Unit	AP2560e
Item no.		5100048488
Rated current	A	21.5
Rated voltage	V	51
Electrical load rating	kW	3.1
Kind of current (output)		DC
Centrifugal force	kN	25,500
Oscillations	Hz	98
	rpm	5880
Compaction performance*	m ² /h	756
Travel speed	m/min	21
Gradeability	%	46.6
Length (in working position)	mm	1241
Width	mm	600
Height	mm	500
Vertical clearance	mm	500
Weight	kg	133
Operating weight	kg	143
Recommended rechargeable battery type		BP1000
Battery runtime BP1000	min	32
Storage temperature range	°C	-30 – +50
Operating temperature range	°C	0 – +45
Sound pressure level L _{pA}	dB(A)	94
Sound power level L _{WA} measured guaranteed	dB(A)	107
	dB(A)	108
Vibration total value a _{hV}	m/s ²	4.4
Uncertainty of measurement of the vibration total value a _{hV}	m/s ²	0.5
* Depending on the soil properties.		



16.3 Rechargeable battery

Designation		BP1000
Item no.		5100025709
Rated voltage	V	51
Kind of current (output)		DC
Length	mm	220
Width	mm	290
Height	mm	197
Weight	kg	9.4
Battery product identification		14INR19/65/-8
Battery type		Lithium ion
Energy content	Wh	1008
Capacity	Ah	20
Max. discharge current	A	160
Max. charging current	A	32
Protection rating		IP2X
Storage temperature range	°C	-30 – +50
Operating temperature range	°C	-10 – +50
Operating temperature range when charging	°C	0 – +45

16.4 Battery charger

Designation		C48/4
Item no.		5100006221
Rated voltage	V	230 (90 – 265)
Kind of current (input)		AC 1~
Rated current	A	<3
Rated frequency	Hz	50 – 60
Kind of current (output)		DC +/-
Output current	A	4 +/-0.5
Max. output voltage	V	57.6
Length	mm	190
Width	mm	145
Height	mm	65
Weight	kg	2.0
Power cable	mm	1500
Power cable	mm	1800
Class rating		II.
Protection rating		IP54

Designation		C48/4
Storage temperature range	°C	-30 - +50
Operating temperature range	°C	0 - +45

16.4.1 Extension cable



WARNING

Warning of electrical voltage!

Serious injury due to electric shock.

- Check power cable and extension cable for damage.
- Only use extension cables whose grounded conductor is connected to the plug and coupling - only for machines of class rating I + III, see chapter *Technical data*.

The following points must be observed:

- Only use approved extension cables.
- Data about the model designation and voltage of this machine is located on the nameplate.
- The necessary stranded conductor cross-section can be found in the following table.

Machine type	Voltage [V]	Extension [m]	Stranded conductor cross-section [mm ²]
C48/4	230	< 150	1.5
C48/13	230	< 150	1.5

**WACKER
NEUSON**

EC Declaration of Conformity

Manufacturer

Wacker Neuson Produktion GmbH & Co. KG, Wackerstraße 6, D-85084 Reichertshofen
This declaration of conformity is issued under the sole responsibility of the manufacturer.

Product	AP2560
Product type	Vibratory plate
Function of product	Soil compaction
Material number	5100048488
Net installed power	3,1 kW
Measured sound power level	107 db(A)
Guaranteed sound power level	108 db(A)

Conformity assessment procedure

2000/14/EC, Annex VIII

Notified body

TÜV Rheinland LGA Products GmbH, Tillystr. 2, D-90431 Nürnberg (NB 0197)

Guidelines and standards

We hereby declare that this product complies with the relevant provisions and requirements of the following directives and standards:

2006/42/EC, 2000/14/EC, 2014/30/EU, EN 500-1:2006 +A1:2009, EN 500-4:2011, EN ISO 13766-1:2019, EN ISO 13766-2:2019

Person responsible for technical documents

Wacker Neuson Produktion GmbH & Co. KG, Wackerstraße 6, D-85084 Reichertshofen

Reichertshofen, 19.02.2019

Helmut Bauer
Managing Director

Original Declaration of Conformity

5100049441_02_AP2560_CE_en



**WACKER
NEUSON**

EC Declaration of Conformity

Manufacturer

Wacker Neuson Produktion GmbH & Co. KG, Wackerstraße 6, D-85084 Reichertshofen
This declaration of conformity is issued under the sole responsibility of the manufacturer.

Product	C48/4
Product type	Battery Charger
Function of product	Charging the battery
Material number	5100006221

Guidelines and standards

We hereby declare that this product complies with the relevant provisions and requirements of the following directives and standards:

2014/35/EU, 2014/30/EU, EN 55014-1:2017, EN 55014-2:2015, EN 60335-1:2012 +A11:2014
+AC:2014 +A13:2017, EN 60335-2-29:2004 +A2:2010

Person responsible for technical documents

Wacker Neuson Produktion GmbH & Co. KG, Wackerstraße 6, D-85084 Reichertshofen

Reichertshofen, 18.02.2019

Helmut Bauer
Managing Director

Original Declaration of Conformity

5100049441_02_C48/4_CE_en

